


ROADMAP
MAIN SELECTOR


Power up display

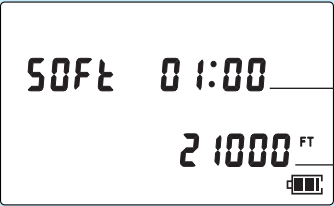

Firmware Version

Scale Type

Logbook Screen # 1. (Main information)

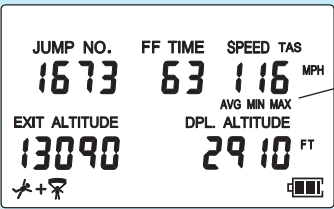

Scrolls automatically through
AVG, MAX and MIN speeds.

Example

To scroll through the previous jumps, press

To scroll forward, press


To go to highest jump #, press and hold for 3 seconds

To go to lowest jump #, press and hold for 3 seconds

Main Display

(If no button has been pressed within 5 minutes,
the ALTITRACK will return to this window)

Press or to toggle between current date and time

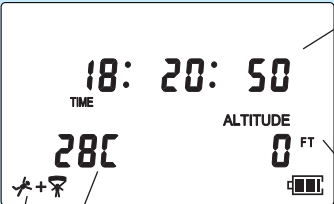

Current time (24 hour format)
or
Current date (format: yyyy:mm:dd)

Current temperature inside instrument in
Celsius or Fahrenheit


Current altitude

Freefall and canopy log status

MAIN SELECTOR

Press and hold for 3
seconds to enter the
SETUP SELECTOR

Logbook Screen # 2. (Playback, Jump Profile)

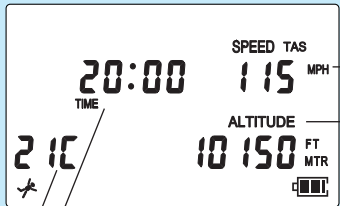

Speed
at time

Altitude
at time

Time after exit in seconds and 1/4 seconds

Temperature inside instrument at exit and then
updated every 30 sec.


Press to playback the jump profile and press to playback the
jump profile in reverse.

Press to stop playback

Press AND at the same time to playback jump on analog face.
Wait for pointer to go to EXIT point, then press "Left Front Button" to start
playback.

Press "Right Front Button" to stop playback

Logbook Screen # 3. (Date, Time and Dive Type)

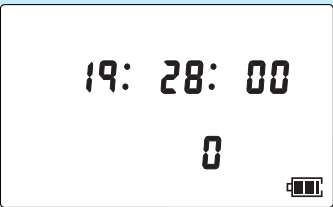

Dive Type

To scroll through the previous jumps press

To change direction, press

TURN FOR SETUP SELECTOR

ROADMAP SETUP SELECTOR

Beep ON / OFF

BEEP:0h

Press to toggle between BEEP ON/OFF.

Celsius / Fahrenheit Selector

C

Press to toggle between Celsius and Fahrenheit.

Dive Type Selector

DIVE
TYPE 0

Press ("DIVE TYPE" flashes).
Press to scroll forward through the Dive Type list.
Press to scroll backward through the Dive Type list.
Press to store your selection.

Canopy Log Enable / Disable

Press to enable / disable canopy profile log.
 + : Logging freefall and canopy profiles
 : Logging freefall profile

True Airspeed (TAS) / Skydiver's Airspeed

TASAS

Press to toggle between TAS and SAS.

Feet / Meter Selector

FT
MTR

Press to toggle between FT and MTR.

MPH / KMH Selector

MPH
KMH

Press to toggle between MPH and KMH.

Main Setup Display

OFF TOTAL TAS
BEEP:0h
DIVE TYPE 0
FT

Press to move forward in setup options.
Press to move backward in setup options.

Turn the ALTITRACK OFF

OFF
20 0
400

Press ("OFF" flashes).
Press to increase the counter to "Match Value".
Press to decrease counter to the "Match Value".
At "Match Value" press .
The pointer will move to the 6 o'clock position and the unit turns OFF.

Delete Jump

JUMP NO. 1673 FF TIME 63 SPEED 116 MPH
EXIT ALTITUDE 13090 DPL ALTITUDE 2910 FT

Press ("Delete Jump Icon" flashes).
Press to increase the counter to "Match Value".
Press decrease counter to the "Match Value".
At "Match Value" press to delete current jump.

Set Total Jumps

TOTAL
JUMP NO. 1673

Press ("TOTAL" flashes).
Press to increase the jump total.
Press to decrease the jump total.
Press to store the new total number of jumps and end.

Set Total Freefall Time

TOTAL
FF TIME 99:13:39

Press ("TOTAL" flashes).
Press to increase total freefall time.
Press to decrease total freefall time.
Press to store the new freefall time and end.

Set Current Date

2005:02:07
DATE

Press ("Clock" icon flashes).
Press to increase date value.
Press to decrease date value.
Press to store the new date and end.
NOTE: Date format is YYYY:MM:DD.

Set Current Time

19:22:28
TIME

Press ("Clock" icon flashes).
Press to increase time value.
Press to decrease time value.
Press to store the new time and end.

TURN FOR MAIN SELECTOR

SETUP SELECTOR

To leave a menu function, wait until the display times out or,
press or repeatedly until returning to the
Main Setup Display, then press to exit.

Note: If no button has been pressed within 5 minutes after
choosing any SETUP window,
the ALTITRACK will return to the Main display.